Setting up the Polycom PowerCam Presenter

What's in the boxes?

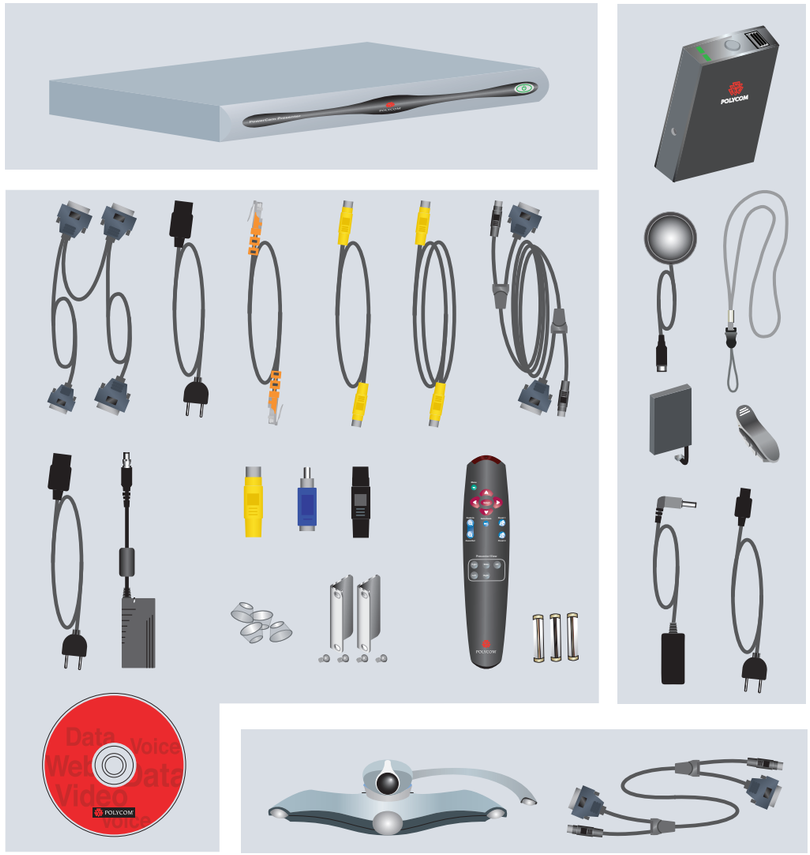

Setting up the Controller

Note: If you are connecting an optional Polycom® VSX™ video conferencing system to your Polycom PowerCam Presenter™, see the other side of this document.

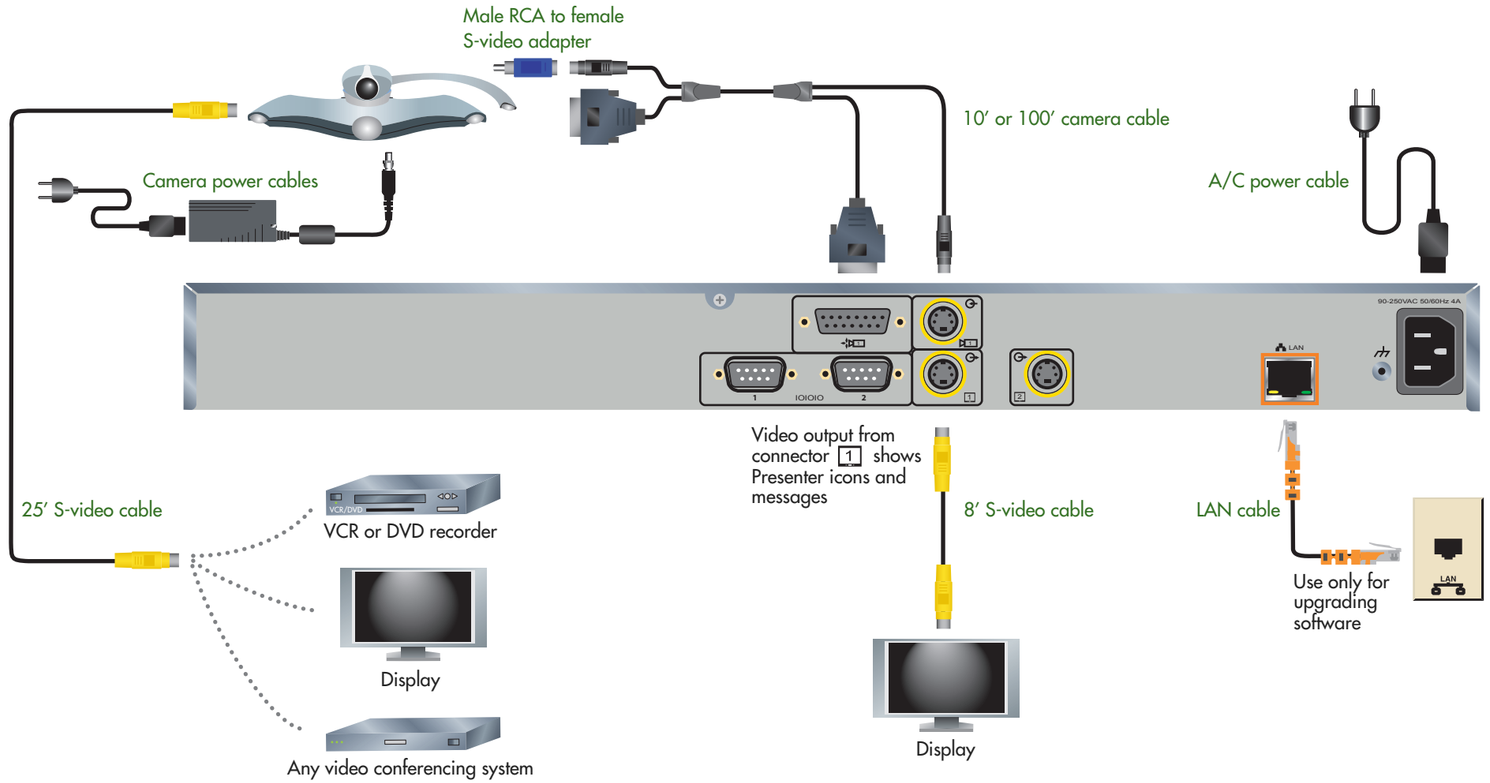

Setting up the Locator Pack Assembly

1

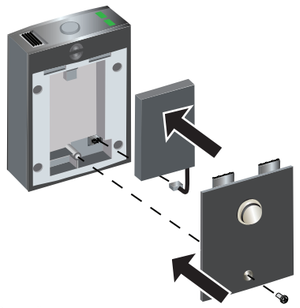

2

Charging time: 3 hours
Operating time: 8 hours

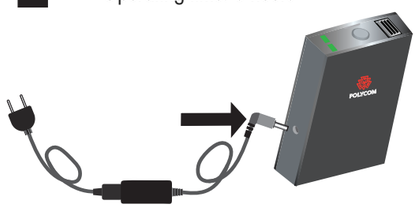

3

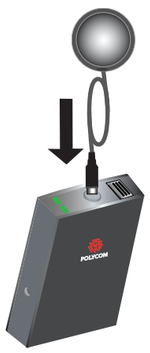

4

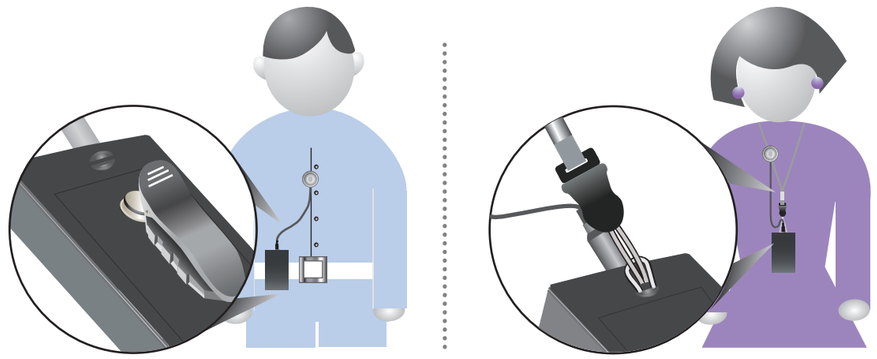

Attach the belt clip to the locator pack OR attach the lanyard to the locator pack.

Caution

Refer to the *User's Guide for the Polycom PowerCam Presenter* for important information about charging and using the battery pack.

VideoVoiceDataWeb

Setting up the Controller with a VSX Video Conferencing System

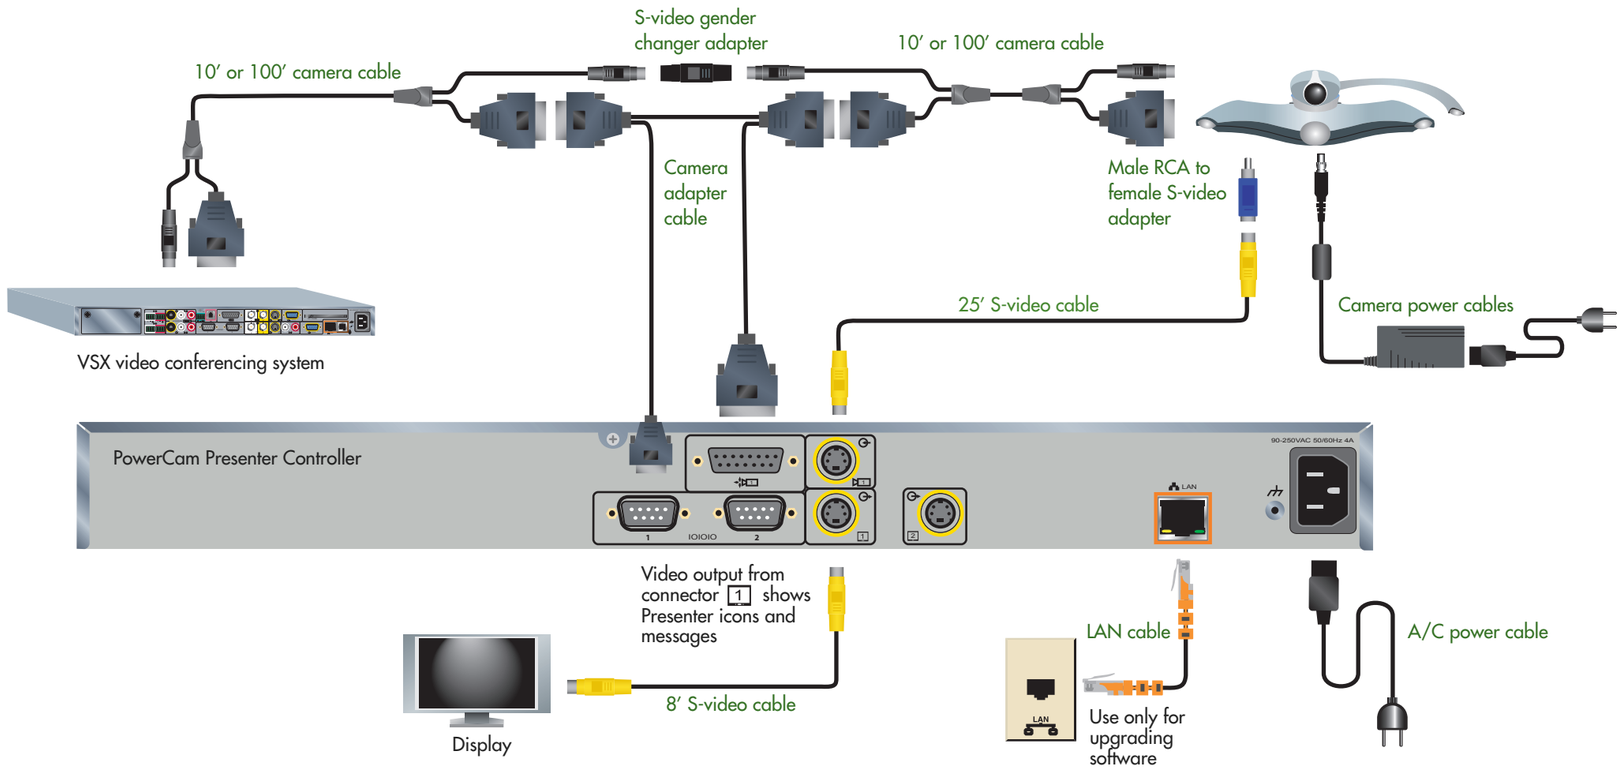

Powering on the Polycom PowerCam Presenter

1. After all the cables are connected, power on the Polycom PowerCam Presenter controller:

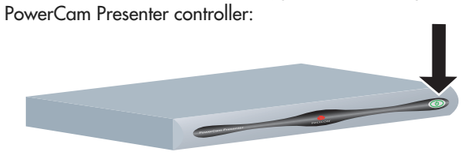

2. If you have a VSX video conferencing system, power it on next:

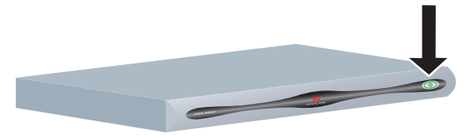

3. Wait 90 seconds, and then power on the locator pack:

Setting up the Camera

1

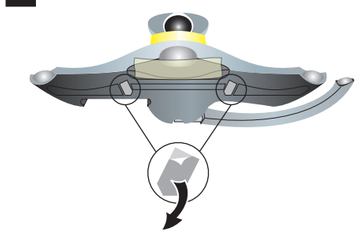

2

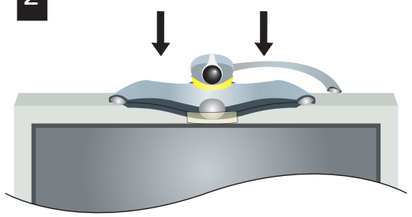

3

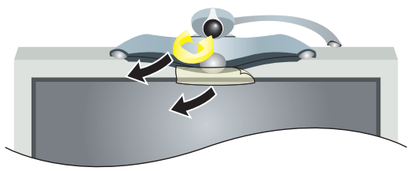

4

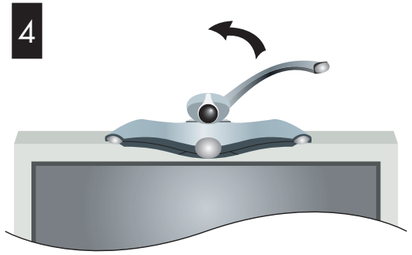

- Place the camera where it will be no more than 50 feet (15.2 meters) away from the person wearing the locator.
- Place the camera about 6 feet (1.8 meters) to 7 feet (2.1 meters) above the floor.
- Leave at least 1 foot (.3 meters) between the back of the camera and the wall. If you add acoustic foam on the wall, you can place the camera slightly closer than 1 foot (.3 meters) from the wall.

1725-23626-001/A

©2006, Polycom, Inc. All rights reserved. Polycom® and the Polycom logo are registered trademarks, and Polycom PowerCam Presenter™ and VSX™ are trademarks of Polycom, Inc.

VideoVoiceDataWeb